

BR5250TN

Refill instruction for Brother TN-540/550/570/TN580 Toner Cartridges



Use a flathead screwdriver to pop out the large plastic plug found on the side of the side of the cartridge. ***IMPORTANT: You must dispose of any original toner in the cartridge as much as possible before refilling. Dispose of toner properly into a trash can, or use a vacuum with a hose for best results (if possible).***


Before opening the bottle of toner, turn it upside down and tap it on a table to loosen the toner and allow it to flow freely. Remove the cap and pull the seal off the bottle. Attach the funnel cap making to sure it is on tightly. Tilt the funnel cap toward the filling hole and insert it into the hole. If the toner stops flowing before the cartridge is full, simply remove the toner, close the cap, turn the bottle upside down and tap it on a table. Once the cartridge is full, seal the hole with the plug by twisting it until it is completely seated. Now gently shake the cartridge side to side to distribute the toner.

*** For STARTER CARTRIDGES:**


Brother TN550 / TN580 reset gear (sold separately) - required for Brother TN350 / TN580 STARTER CARTRIDGES. A starter cartridge is the cartridge that ships free with your printer. If you purchase the cartridge separately to the printer, you will not require this gear. Since the starter cartridges don't always have this reset gear installed, the printer displays a "toner life end" message if no reset gear is detected. A reset gear must be installed on any used TN350 / TN580 starter cartridge in order for the printer to function properly once the cartridge has been refilled.



1. Remove the screws circled in red in the illustration above. Carefully detach the panel from the cartridge.

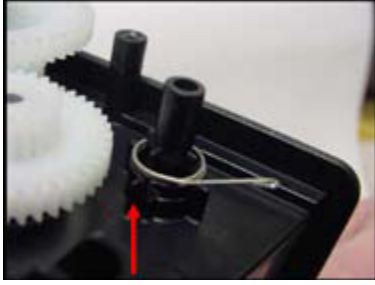

2. Set the flag gear spring on the gear post as shown above. Set the small end of the spring on the slot on the gear post

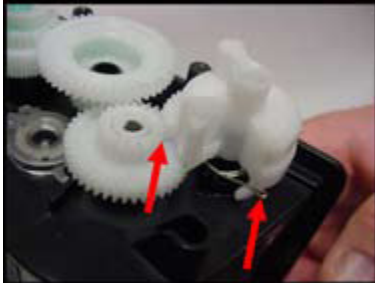

3. Place the flag gear on the post and position the spring as shown above.